



Important! The cardboard and paper parts are fragile!
Please work carefully, don't squeeze or force the parts.
The illustrations will lead you through the process.

• Urban Birds Collection •

Instruction sheet Read first!




Find instructions and assembling video's for more visual inspiration on **Assemblishop.com**




1

Remove carefully
Enlever soigneusement
Sorgfältig entfernen
Voorzichtig loshalen

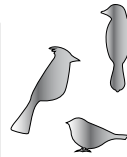


2

Make 28 small balls of the glue tack
Faites 28 de petites boules de la colle collante
Machen Sie 28 kleine Kugeln aus dem Klebe-Tack
Maak 28 kleine balletjes van de kneedgum

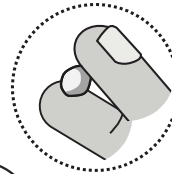

3

Cut cord to length and melt the ends
Couper le cordon et faire fondre les extrémités
Schnur ablängen und Enden schmelzen
Knip het touw op lengte en smelt de eindjes

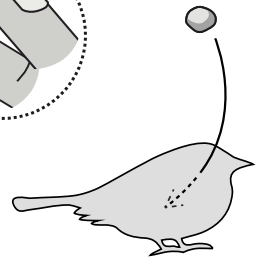

4

Install the cord on the wall
Installieren Sie das Kabel an der Wand
Installez le cordon sur le mur
Installeer het koord aan de muur

Black paper dot

Glue tack

Cord


Glue tack

5

Add glue tack, press firmly against surface
Ajouter un point de colle,
appuyer fermement contre la surface
Klebe-Tack hinzufügen,
drücken Sie fest auf die Oberfläche
Plak de kneedgum,
druk stevig tegen het oppervlak



rotate to
remove

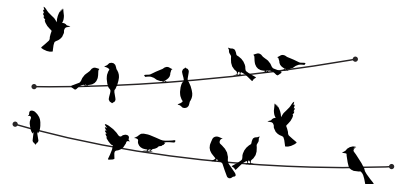

★ Presentation tip ★



Check out
Assemblishop.com
for inspiration and
ideas to display your
Urban Birds Collection!

Please test glue tack on surface before installation,
to prevent stains or damage!

Testez les points de colle sur la surface avant
l'installation, afin d'éviter les taches ou les dommages!

Testen Sie die Klebe-Tack auf der Oberfläche vorher
Installation, um Beschädigungen zu vermeiden!

Test de kneedgum op het oppervlak alvorens gebruik,
om schade of vlekken te voorkomen!

